

## SV4 Steam & Vacuum

### Preparation



1. Vacuum tank
2. Vacuum hose socket
3. Cold watertank
4. Accessory basket Handle
5. On/Off switch




6. Temperature Display LED
7. Heater On LED
8. Steam Ready LED
9. Refill Cold Water LED



Connect handle to the back of the machine using the 4 wing nuts provided (8).



Leave the top wing nuts loose for the basket to be mounted.

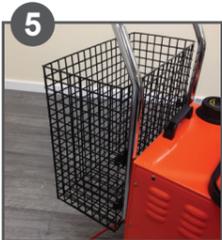

Mount the basket and tighten wing nuts fully (7).



Using clean cold water fill the reservoir and replace cap (2).



Connect vacuum hose, clicking it into position (2). Ensure it cannot be pulled out.



Lift the flap and connect the hose ensuring the pin locks into position (3).

### Operation



Plug the machine into a suitable socket and turn the power ON (9).



The 'Heater On LED' will illuminate (9).



In approximately 5 minutes the 'Steam Ready LED' will illuminate (10). Machine is now ready to be used.



The red trigger will release steam when pressed. The button will lock the steam trigger in the off position (14).



The left hand switch will activate the vacuum and right hand button is inactive.



Affix desired accessory for cleaning task and ensure it is locked into position.




Push brake lever down to stop the machine from moving when in use.



Refill cold water when light illuminates and a beeping noise is heard.



If the vacuum stops suctioning, switch off the machine and empty the collection tank (1).

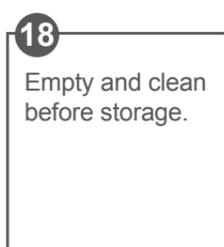

Empty and clean before storage.

### Maintenance

## ATTENTION!

Do not use the machine before you have read and understood the operating instructions!  
Questions: 1-800-558-2332

