

## Ecobot 40

### Preparation



1 If the machine is turned off with the key, turn back to on position.



2 Remove machine from charger and ensure the emergency cut off switch is free (outer position).




3 Raise top computer and open vacuum chamber lid.



4 Check Insert bag.


### Operation

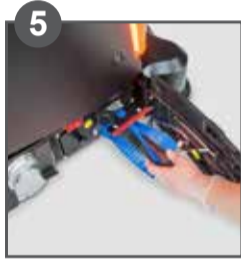

5 Ensure roller brush and side brushes are fitted.




6 Choose profile and log in with your personal pin.

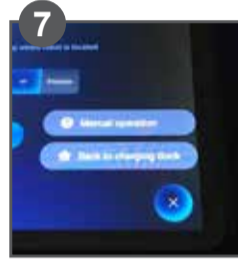

7 Check if machine is in manual mod for free movement.



8 Select desired map to operate in.

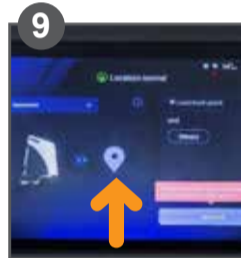

9 Ensure "location" (📍) is normal (grey) if not (red) locate machine.



10 To locate, take the machine to the Landmark point and click arrived. The machine will then rotate to locate.



11 When located, choose task, check cleaning mode and number of times to carry out the task. Then press "Start".



12 Machine will now autonomously clean according to task.

### Maintenance



13 Empty hopper and wipe down.



14 Visual check of roller brush and side brushes clean if required.



15 Visual check of bag and filter, replace if required



16 Wipe machine down with damp cloth.



17 Place machine on charge.

## ATTENTION!

Do not use the machine before you have read and understood the operating instructions!  
Questions: 1-800-558-2332

