

## ERGODISC FLEXX 43 (with spray unit)

### Preparation



1 Display warning signs./ prepare PPE



2 Lay the machine down with handle on the floor to fit pad/pad drive or brush.



3 Remove battery from charger.

4 Insert battery into battery compartment.



5 Fit additional weight/s as required.



6 If required fit & secure solution tank.

7 Fill with water and dosing cleaning chemical.



8 Insert water tank hose into top of machine and solution feed cord is fitted and working.



9a If fitted, fill the spray unit with water and cleaning solution.

9b Test the spray button is working.



10 Lower handle to a comfortable position by squeezing the right lower lever.

### Operation



11 Press the correct cleaning speed button for the application.



12 To activate machine press in orange button whilst squeezing the upper lever/s.



13 Raise the handle to move to the right. Lower handle to move to the left.



14 First clean along edges.



15 Work from side to side with overlapping passes.



16 When not in use, put the handle in an upright position. Switch battery off if left unsupervised.



17 Exchange batteries if further work is required.



18 Switch off battery when application is completed.

### Maintenance



19 Remove battery.



20 Place the battery on the charger.  
Orange = charging  
Green = fully charged  
Red = fault



21 Remove pad/pad drive or brush. Wash and hang to dry.



22 Wipe machine clean with a damp cloth.



23 If the foam generator is fitted, empty and rinse thoroughly.



25 If the solution tank is fitted, empty and check/clean the valve as required.



26 Empty spray unit and check/clean system as required (flush with clean water). Let the lid open to facilitate drying.



27 Do not store machines with pad/brush fitted.

#### Speed setting

- 1.HD
- 2.Low
- 3.High

#### Primary application guidelines

Grinding / Sanding / Crystallization / TWISTER / Stripping  
Stripping / Scrubbing / TWISTER / Carpet wet shampooing / Carpet dry foam shampooing / Carpet bonnet skimming  
Spray cleaning / Dry buffing / Carpet bonnet skimming

## ATTENTION!

Do not use the machine before you have read and understood the operating instructions!

Questions: 1-800-558-2332

[www.taski.com](http://www.taski.com)

TASKI is one of four core areas of the Diversey business. All logos and trademarks are owned by or licensed to Diversey, Inc. © 2023 Diversey, Inc. All Rights Reserved. 98895-USG master (04/23)

