


ULTIMAXX 360

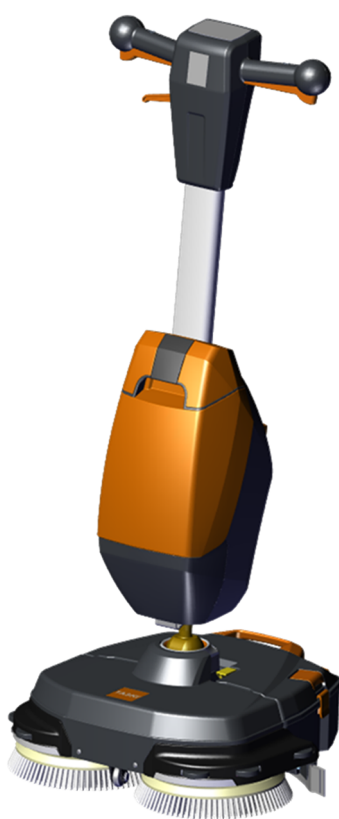

Operating instructions

V003/ 12092-57 4025

TRANSLATION OF THE ORIGINAL INSTRUCTIONS

EN



Read the operating instructions carefully before commissioning. Keep these operating instructions with care and at hand for quick reference at any time.

Download PDF:



BG	С настоящото декларираме, че цитираната по-долу машина съответства по концепция и конструкция, както и по начин на производство, прилаган от нас, на съответните основни изисквания за техническа безопасност и безвредност на Директивите на ЕС. При изменение на продукта, което не е съгласувано с нас, тази декларация губи своята валидност.
CZ	Tímto prohlašujeme, že níže označené stroje odpovídají jejich základní koncepci a konstrukčním provedením, stejně jako námi do provozu uvedenými konkrétními provedeními, příslušným zásadním požadavkům o bezpečnosti a ochraně zdraví směrnicí EU. V případě změny výrobku, která nebyla námi odsouhlasena, ztrácí toto prohlášení svou platnost.
DA	Herved erklærer vi, at den nedenfor nævnte maskine i design og konstruktion og i den af os i handlen bragte udgave overholder de gældende grundlæggende sikkerhedsog sundhedskrav i EU-direktiverne. I tilfælde af ændringer af produktet, som vi ikke har godkendt, bortfalder gyldigheden af denne erklæring.
DE	Hiermit erklären wir, dass die nachfolgend bezeichnete Maschine aufgrund ihrer Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der EU-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung des Produktes verliert diese Erklärung ihre Gültigkeit.
EN	We hereby declare that the machine described below complies with the relevant basic safety and health requirements of the EU Directives, both in its basic design and construction as well as in the version put into circulation by us. In the event of a product amendment which was not cleared by us, this declaration shall no longer be valid.
ES	Por la presente declaramos que la máquina designada a continuación cumple, tanto en lo que respecta a su diseño y tipo constructivo como a la versión puesta a la venta por nosotros, las normas básicas de seguridad y sobre la salud que figuran en las directivas comunitarias correspondientes. En caso de realizar una modificación no autorizada por nosotros, esta declaración pierde su validez.
ET	Käesolevaga kinnitame, et alpool kirjeldatud seade vastab meie poolt turule toodud mudelina oma kontseptsioonilt ja konstruktsioonilt EL direktiivide asjakohastele põhilistele ohutus- ja tervisekaitse nõuetele. Käesolev kinnitus kaotab kehtivuse, kui toodet muudetakse meiega kooskõlastamata.
FI	Vakuutamme, että alla mainitut tuotteet vastaavat suunnittelultaan ja rakenteeltaan sekä valmistustavaltaan EU-direktiivien asianomaisia turvallisuus- ja terveysvaatimuksia. Mikäli tuotetta muutetaan ilman meidän antamaa lupaa, tämä ilmoitus lakkaa olemasta voimassa.
FR	Nous certifions par la présente que la machine spécifiée ci-après répond de par sa conception et son type de construction ainsi que de par la version que nous avons mise sur le marché aux prescriptions fondamentales stipulées en matière de sécurité et d'hygiène par les directives européennes en vigueur. Cette déclaration perd sa validité si le produit est modifié sans notre consentement.
GR	Δια της παρούσης δηλώνουμε ότι το μηχάνημα που χαρακτηρίζεται παρακάτω, με βάση τη σχεδίαση και την κατασκευή του, υπό τη μορφή που διατίθεται στην αγορά, πληροί στις σχετικές βασικές απαιτήσεις ασφαλείας και υγιεινής των οδηγιών της ΕΕ. Σε περίπτωση τροποποίησης του προϊόντος χωρίς τη συγκατάθεσή μας, η παρούσα δήλωση θα καταστεί άκυρη.
HR	Izjavljujemo da navedeni uređaj u svojoj zamisli i konstrukciji te kod nas korištenoj izvedbi odgovara osnovnim sigurnosnim i zdravstvenim zahtjevima u skladu s niže navedenim direktivama Europske Zajednice. U slučaju neovlaštene izmjene proizvoda prestaje važenost ove izjave.
HU	Ezennel tanúsítjuk, hogy az alábbiakban megnevezett gép tervezése és építési módja alapján az általunk forgalomba hozott kivitelen megfelel az EU irányelvek vonatkozó, alapvető biztonsági és egészségügyi követelményeinek. Amennyiben olyan módosítás történik a termékben, amelyet előzetesen nem egyeztetett velünk, akkor a jelen nyilatkozat érvényét veszti.
IT	Con la presente si dichiara che la macchina qui di seguito indicata, in base alla sua concezione, al tipo di costruzione e nella versione da noi introdotta sul mercato, è conforme ai requisiti fondamentali di sicurezza e di sanità delle direttive UE. In caso di modifica del prodotto senza la nostra autorizzazione, questa dichiarazione non sarà più valida.
LT	Šiuo pareiškiame, kad toliau aprašyto aparato brėžiniai ir konstrukcija bei mūsų į rinką išleistas modelis atitinka pagrindinius ES direktyvų saugumo ir sveikatos apsaugos reikalavimus. Ši deklaracija netenka galios, jei gaminyso pakeičiamas nesuderinus jo pakeitimų su mumis.
LV	Ar šo mēs paziņojam, ka turpmāk minētā iekārta, pamatojoties uz tās konstrukciju un izgatavošanas veidu, kā arī mūsu apgrozībā laistajā izpildījumā atbilst ES direktīvu attiecīgajām galvenajām drošības un veselības aizsardzības prasībām. Ja tiek veikta ar mums nesaskaņota izstrādājuma izmaiņošana, šī deklarācija nav derīga.
NL	Hierbij verklaren wij dat de hierna vermelde machine door haar ontwerp en bouwwijze en in de door ons in de handel gebrachte uitvoering voldoet aan de betreffende fundamentele veiligheids- en gezondheidseisen, zoals vermeld in de desbetreffende EU-richtlijnen. In geval van een niet met ons overeengekomen wijziging van het product, verliest deze verklaring haar geldigheid.
NO	Vi erklærer herved at maskinen angitt nedenfor oppfyller de grunnleggende sikkerhetsog helsekravene i de relevante EU-direktivene, med hensyn til både design, konstruksjon og type markedsført av oss. Ved endringer av produkter som ikke er godkjent fra oss, bortfaller denne erklæringen.
PL	Niniejszym oświadczamy, że określone poniżej urządzenie odpowiada pod względem koncepcji, konstrukcji oraz wprowadzonej przez nas do handlu wersji obowiązującym wymogom dyrektyw UE dotyczącym wymagań w zakresie bezpieczeństwa i zdrowia. W przypadku dokonania niezgodzonych z nami zmian w produkcie niniejsza deklaracja traci ważność.
PT	Declaramos que a máquina a seguir designada corresponde às exigências de segurança e de saúde básicas estabelecidas nas Directivas UE por quanto concerne à sua concepção e ao tipo de construção assim como na versão lançada no mercado. Em caso de uma alteração do produto que não tenha sido autorizada por nós, esta declaração perde a sua validade.
RO	Prin prezenta declarăm că aparatul desemnat mai jos corespunde cerințelor fundamentale privind siguranța în exploatare și sănătatea incluse în directivele UE aplicabile, datorită conceptului și a modului de construcție pe care se bazează, în varianta comercializată de noi. La o modificare a produsului care nu a fost aprobată de noi în prealabil, această declarație își pierde valabilitatea.
RU	Настоящим мы заявляем, что нижеуказанный прибор по своей концепции и конструкции, а также в осуществленном и допущенном нами к продаже исполнении отвечает соответствующим основным требованиям по безопасности и здоровью согласно директивам ЕС. В случае несогласованного с нами изменения изделия настоящее заявление становится недействительным.
SK	Týmto vyhlasujeme, že ďalej označený stroj zodpovedá na základe jeho koncepcie a konštrukcie a takisto vyhotovenia, ktoré sme dodali, príslušným základným požiadavkám na bezpečnosť a ochranu zdravia uvedeným v smerniciach EÚ. V prípade zmeny výrobku, ktorá s nami nebola konzultovaná, stráca toto vyhlásenie svoju platnosť.
SL	S to izjavo potrjujemo, da spodaj omenjeni stroj zaradi svoje zasnovne in načina izdelave ustreza temeljnim varnostnim in zdravstvenim zahtevam EU-standardov. V primeru spremembe izdelka, ki ni bila potrjena z naše s strani, ta izjava ni več veljavna.
SV	Härmed försäkras vi att nedanstående betecknade maskin i ändamål och konstruktion samt i den av oss levererade versionen motsvarar EU-direktivens tillämpliga grundläggande säkerhets- och hälsokrav. Vid av oss ej godkända ändringar på produkten upphör denna förklaring att gälla.
TR	İşbu belge ile aşağıda tanımlanan makinenin konsepti ve tasarımı ve tarafımızdan piyasaya sürülen modeliyle AB yönetmeliklerinin temel teşkil eden ilgili güvenlik ve sağlık yükümlülüklerine uygun olduğunu bildiririz. Üründe yapılan herhangi bir değişiklik bu beyanı geçersiz kılar.
YU	Ovim izjavljujemo da ovde opisana mašina po svojoj koncepciji i načinu izrade, sa svim njenim modelima koje smo izneli na tržište, odgovara osnovnim zahtevima dole navedenih propisa Evropske Zajednice o sigurnosti i zdravstvenoj zaštiti. U slučaju izmena na proizvodu koje nisu dogovorene s nama, ova izjava ne važi.

Item description:	Scrubber dryer machine for commercial use	
Model:	ULTIMAXX 360	
Type:	ULTIMAXX 360	
Serial Number:	Refer to the rating label on the machine	
Trademark:	TASKI®	
Manufacturer:	Diversey Europe Operations B.V., De Corridor 4, 3621ZB Breukelen - The Netherlands	
Produced by:	Diversey Switzerland Production GmbH, Eschlikonerstrasse, 9542 Münchwilen TG, Switzerland	

Applicable EU Directives / Regulations:

Directive 2006/42/EC | Directive 2014/30/EU

Harmonised standards:

EN 60335-1:2012+AC:2014+A11:2014+A12:2017+A13:2017+A1:2019+A14:2019+A2:2019+A15:2021+A16:2023 / EN 60335-2-72:2012 / EN 55012:2007+A1:2009 / EN IEC 55014-2:2021 / EN 62233:2008 /

<u>Authorized signatory:</u>	<u>Responsible for technical file:</u>
 Andreas Bosch Vice President, Global Innovation and Regulatory, TASKI Solutions Münchwilen, 09.05.2025	Andreas Bosch Vice President, Global Innovation and Regulatory, TASKI Solutions Diversey Europe B.V. Utrecht Zweigniederlassung Münchwilen Eschlikonerstrasse 28 9542 Münchwilen - Switzerland
	CE first applied: 05.2025

The signatories act on behalf of company management and with full power of attorney.

Contents

1 Preface	5
2 Purpose of the machine	6
3 Safety Instructions	6
4 Emergency	8
5 Graphic symbols	8
6 Description of the machine	9
7 Operation panel	10
8 Batteries and battery charger	10
9 Before using the machine	10
10 Machine settings	12
11 Use the machine	13
12 Machine maintenance	16
13 Troubleshooting	18
14 Technical Data	19
15 Accessories and options	19
16 Transportation, parking, and disposal	20

1 Preface

The operator safety manual



This manual is essential for understanding the rules to be followed to operate safely. Before reading it, personnel should undergo appropriate training in both preparation, installation of accessories, and use and maintenance of the machine.

The following are some important pointers:

- Please read the Safety section carefully! With its warnings and best practices, it provides all the information you need to operate safely!
- Pay attention to all the warnings in the manual.
- Pay attention to all the signs on the machine! They accurately indicate where there may be a danger!
- Only the procedures described in this manual are safe! Before any operation, read and follow the relevant sections in this manual.
- Keep this manual handy for quick reference.

Explanation of security messages

All circumstances where there are risks to personal and environmental safety and to the good condition of the machine have been highlighted in the manual with special symbols indicating the severity of the consequences and the likelihood of the risk occurring if appropriate preventive measures are not taken.

In addition to special symbols, safety messages include a description of the hazard, the consequences if preventive measures are not taken, and how to avoid the hazard.

The following is the list of message types:

⚠ DANGER Indicates an imminently hazardous situation that, if not avoided, will cause death or serious injury to the operator or others.

⚠ WARNING Indicates a potentially hazardous situation that, if not avoided, could cause death or serious injury to the operator or others.

⚠ CAUTION Indicates a potentially hazardous situation that, if not avoided, could cause minor or moderate injury to the operator or others.

SAFETY INSTRUCTIONS Indicate specific instructions or procedures related to safety.

NOTICE Indicates obligations that can cause damage to the machine if not complied with.

Operating instructions and additional documents

Note: These operating instructions, and those for all TASKI machines, are available at: www.taski.com. It is possible to view or download these operating instructions by framing the QR code on the cover.

Note: The wiring diagram for this machine is available on the www.taski.com spare parts online catalogs. For more information, contact customer service or an authorized Diversey center.

Note: All spare parts and accessories are available on the www.taski.com spare parts online catalogs. For more information, contact customer service or an authorized Diversey center.

Machine compliance


TASKI machines comply, in design and construction, with the relevant essential health and safety requirements of local directives and regulations and carry the certification mark.

Note: The Declaration of Conformity for this machine is attached to this manual. It is also available at: www.taski.com

Environmental protection



Machine packaging materials are recyclable. Do not dispose of packaging with household waste but deliver it to a separate waste collection center. Follow local regulations.

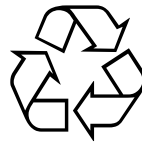

Used appliances contain valuable recyclable materials that must be delivered to a recycling collection center for recyclable waste to ensure their reuse. Batteries, oil and similar substances should not be dispersed into the environment.

2 Purpose of the machine

Intended use

This machine is intended for commercial use (such as in hotels, schools, hospitals, factories, shopping malls, offices, etc.) for wet cleaning of hard floor coverings indoors.

Unintended and incorrect use

Any use not intended by the manufacturer is considered as not in accordance with the intended use and, therefore, constitutes misuse. The manufacturer will be relieved of any liability in case of accidents; therefore, the user will be responsible for all risks resulting from such use.

The following is a non-exhaustive list of examples of uses and misbehaviors of this machine that endanger operator safety and could damage unsuitable surfaces:

- Polish, oil and wax surfaces.
- Clean carpets and vacuum dust.
- Wet clean hardwood or laminate floors.

3 Safety Instructions

Training

⚠ DANGER Inadequate information and training. Accidents. The machine should be used only by trained and authorized persons with the appropriate level of experience. It should not be used by people with reduced physical, sensory or mental capabilities. For complete training on the safe use of the machine, read the operating manual and become familiar with the machine functions. The operating manual must be included in the training manual.

⚠ DANGER Inadequate information and training. Accidents. Repairs to mechanical or electrical parts of the machine should be carried out only by authorized personnel familiar with all relevant safety regulations.

Use of the machine

⚠ DANGER Misuse of the machine. Accidents. The machine should not be used by children and must not be considered a toy.

⚠ DANGER Misuse of the machine. Personal and machine damage. This machine is not a means of transportation. Do not use the machine to transport objects and people.

⚠ WARNING Inadequate protective equipment. Personal injury. Use the machine while wearing all the protective equipment determined by your employer in the risk analysis.

⚠ CAUTION Incorrect environmental conditions. Accidents, machine and property damage. Use and store the machine only indoors.

⚠ NOTICE Incorrect environmental conditions. Machine damage. Use and store the machine in a dry, dust-free environment with temperature between +10 °C and +35 °C (+50 °F / +95 °F).

Note: TASKI machines and equipment are designed so that, according to the current state of knowledge, health hazards due to noise or vibration can be excluded.

Note: TASKI machines are designed to achieve the best cleaning results with TASKI cleaning products. Other cleaning products may cause a malfunction or damage to the machine or the environment. For this reason, it is recommended to use only TASKI cleaning products.

Cleaners

⚠ WARNING Inadequate protective equipment. Personal injury. Handle detergents wearing all personal protective equipment listed in the instructions for use supplied by the detergent manufacturer or determined by your employer in the risk analysis.

⚠ CAUTION Hazardous and polluting materials or substances. Contamination of soil and waterways. Dispose of products according to the directions in the detergent use instructions provided by Diversey.

⚠ NOTICE Unsuitable detergents. Machine damage. Use only detergents recommended by TASKI as these products have the proper foaming power. Using detergents that produce too much foam could damage the machine and the vacuum circuit. Harm due to use of detergents other than TASKI recommended detergents are not covered by the warranty.

⚠ NOTICE Detergents dosed incorrectly. Machine damage. Always follow the instructions for the correct dosage as indicated in the use instructions for the detergents supplied by Diversey.

Work area

⚠ DANGER Explosive or flammable substances. Explosion or flames. Do not use the machine in environments where materials/products containing potentially explosive or flammable substances (e.g., gasoline, solvents, oil, dust, etc.) are stored or handled.

⚠ DANGER Hazardous substances. Health effects. Do not use the machine to vacuum toxic, harmful, corrosive or irritating substances (e.g., harmful dusts, etc.) or flammable liquids as the filter system is not capable of filtering such substances so as to isolate them from the operator.

⚠ DANGER Poor visibility. Accidents. Proceed with caution in poor visibility conditions (e.g., blind corners, before doorways or curves) and pay attention to local conditions, third parties and children.

⚠ DANGER Insufficient distance from high-voltage parts. Electrocutation. In case of damage to safety parts that allow access to live parts (e.g., brush cover, power cable, or covers) turn off the battery immediately.

⚠ DANGER Instability of the machine. Running over, crushing, overturning. Use the machine on surfaces with a maximum slope of 2%. Tackle slopes at low speed so that the machine can be stopped safely.

⚠ DANGER Instability of the machine. Accidents. Use the machine on a stable surface with bearing capacity appropriate for the weight of the machine and the operator.

⚠ WARNING Regulations violated. Accidents, injuries. Comply with national regulations on worker protection and accident prevention.

⚠ CAUTION Unauthorized batteries and battery charger. Machine damage. Use only batteries and battery chargers authorized by TASKI.

⚠ CAUTION Projection of objects or machine jams. Harm to the machine or to people. Before starting to use the machine, clear the work area of objects or hazards of any nature.

Care and maintenance

⚠ DANGER Unauthorized modifications. Compromised machine safety. Any changes not authorized by Diversey make the machine unsafe and will void CE compliance and all warranty and insurance rights.

⚠ DANGER Uncontrollable machine functionality. Accidents and machine damage. After failure, fault, collision, fall, exposure to water/moisture, and standing outdoors have authorized personnel perform a complete inspection of the machine.

⚠ DANGER Unexpected machine movements. Personal injury. Turn off the motor, switch off and remove the battery before working on the machine.

⚠ WARNING Inadequate protective equipment. Personal injury. When performing machine maintenance, put on all the personal protective equipment determined by your employer in the risk analysis. Always refer to the regulations on personal protective equipment and dedicated regulations for the workplace.

Accessories and spare parts

⚠ WARNING Use of unauthorized accessories. Compromised machine safety. Use only those accessories indicated in the operating instructions or recommended by TASKI personnel.

Batteries and battery charger

⚠ CAUTION Unauthorized components. Machine damage. Use only batteries and chargers authorized by TASKI.

⚠ CAUTION Unattended charging is not permitted. The user must supervise the entire charging process.


Transportation and parking

⚠ DANGER Instability of the machine. Crushing, damage to property or machine. Only park or store the machine on a level surface.

⚠ CAUTION Unauthorized use of the machine. Accidents. Turn off and remove the battery before leaving the machine. Never leave the machine unattended.

4 Emergency

Remove the battery.

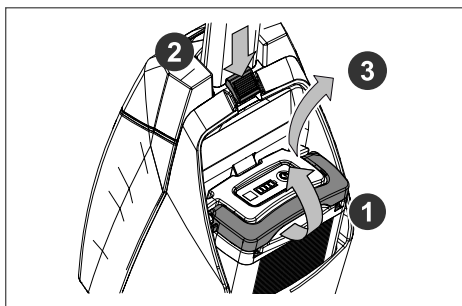


To remove the battery:

1. Turn the handle.
2. Press the battery release button.
3. Pull and remove the battery from the battery compartment.

5 Graphic symbols

 Explanation of symbols on the machine



Read the operating instructions.

Before performing any operation with the machine, please read the operating instructions carefully



 
Water temperature.

Maximum water temperature 60 °C/140 °F. Diversey recommends using cold water. Hot water cools immediately on contact with the floor and, therefore, offers no advantage.



Products.


For best cleaning results, use only cleaning products recommended by Diversey.




Working on slopes.

Do not use the machine on surfaces with a steeper slope than that indicated on the machine.

6 Description of the machine

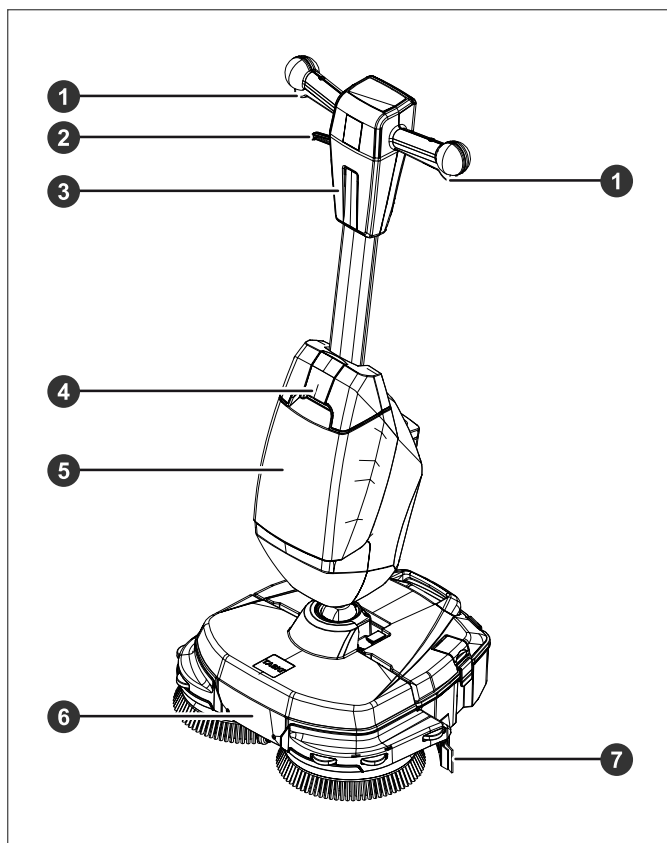


- 1 Drive and brush rotation lever
- 2 Handle release lever
- 3 Handle
- 4 Clean water tank plug
- 5 Clean water tank
- 6 Brush unit
- 7 Blades and suction nozzle

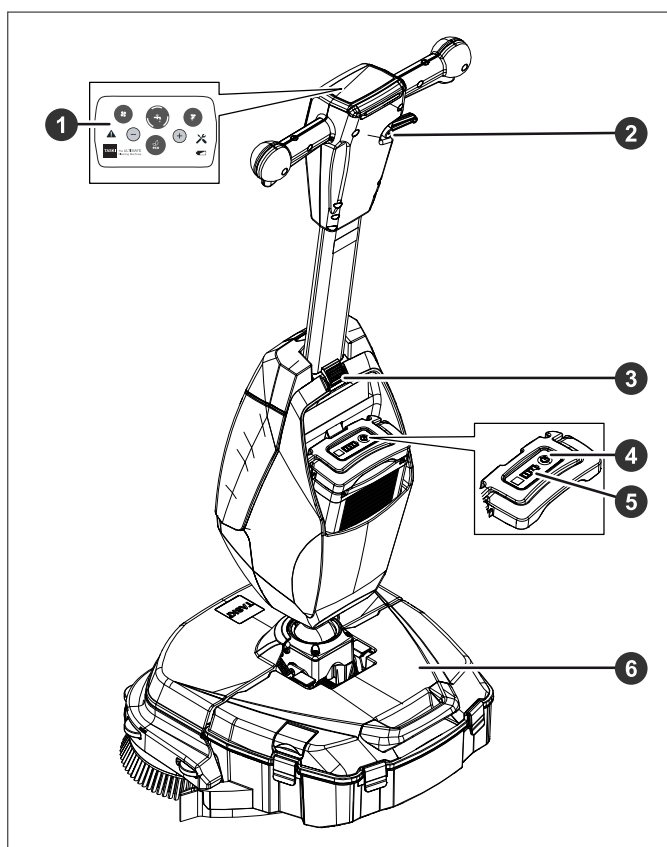

- 1 Operation panel
- 2 Button to lock handle in the upright position
- 3 Battery release button
- 4 Battery on/off button
- 5 Battery charge level
- 6 Dirty water tank

7 Operation panel

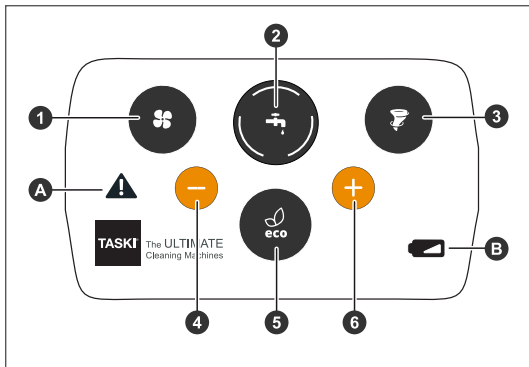

	Button function
1	Activates/deactivates the suction nozzle
2	Activates/deactivates the dispensing of cleaning solution With button 5, access the Water or LED menu
3	Activates/deactivates the Twister function - Twister Function activated (LED on) = 400 rpm - Twister Function deactivated (LED on) = 170 rpm
4	Increases/decreases the amount of cleaning solution
5	Activates/deactivates the ECO mode With button 2, access the Water or LED menu
6	Increases the amount of cleaning solution
	Indicator light
A	Orange indicates failure of the motor, brushes, electrical installation or other machine components
B	Red indicates that the battery needs to be recharged immediately.

8 Batteries and battery charger

Batteries allowed

This machine works with lithium-ion traction batteries.

⚠ CAUTION Incorrect use of batteries. Accidents. Follow the instructions and requirements provided in the battery safety instructions found using this link: www.taski.com

⚠ CAUTION Incorrect use of the battery charger. Accidents. Follow the instructions and requirements provided in the battery instruction of use found using this link: www.taski.com

9 Before using the machine

Overview of procedures

Before using the machine:

1. Install the brushes.
2. Install the suction nozzle blades.
3. Fill the clean water tank.
4. Install the battery.
5. Remove objects on the surface to be cleaned.


Install the brushes

⚠ CAUTION Worn brushes. Damage to machine and surfaces. Replace worn brushes. Use only original spare parts.

NOTICE Insufficient cleanliness. For optimum cleaning, replace dirty brushes with clean ones.

To install the brushes:


1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. From the parking position, tilt the machine onto its rear side.
3. Insert the brush into the hexagonal connections: the brushes stay in place with magnets.

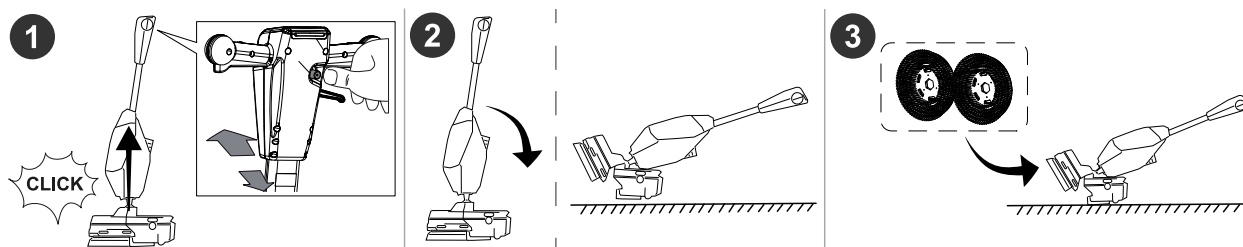

Install the suction nozzle blades


Before installing the suction nozzle blades:

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Press one of the two yellow quick release levers and pull out the dirty water tank using the handle.
3. Open the plug and check that the dirty water tank is empty; empty if necessary.

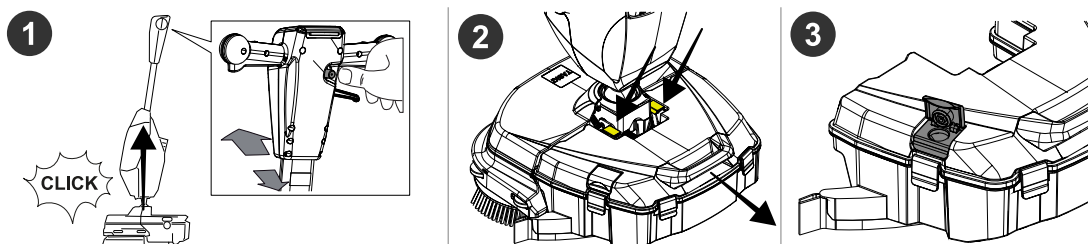

To install the suction nozzle blades:

1. Lift up the hooks and remove the dirty water tank cover.
2. Unscrew the yellow screws and remove the suction nozzle blades holder.
3. Insert/replace the blades.

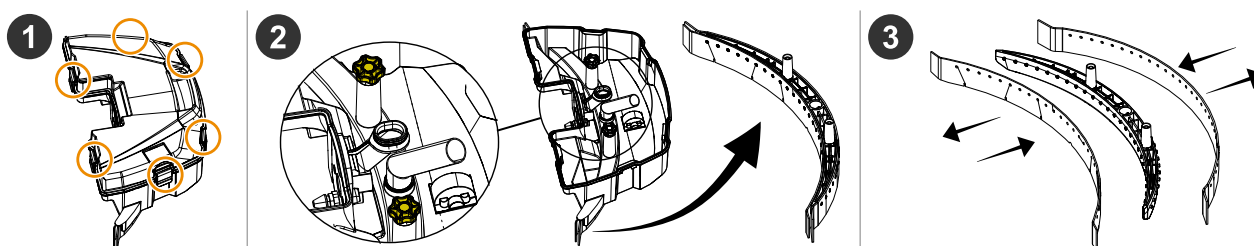


4. Insert the holder with the blades in the holes below the dirty water tank.
5. Tighten the yellow screws.
6. Close the dirty water tank again.

Fill the clean water tank

To fill the clean water tank:

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Remove the clean water tank.
3. Open the filling plug and completely fill the tank with the cleaning solution and close the plug.
4. Reposition the clean water tank.

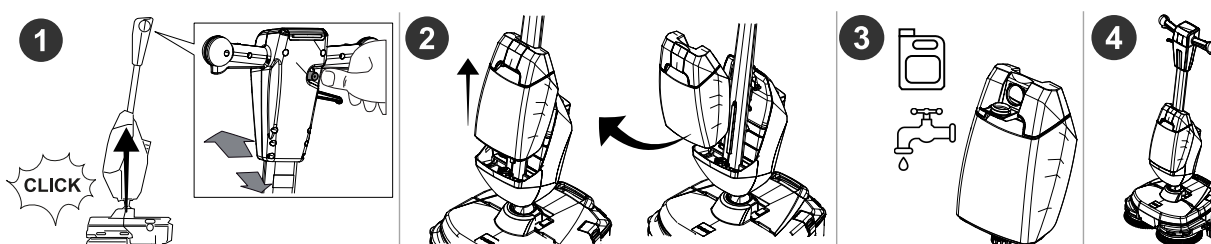


Note: The clean water tank can also be filled when the tank is already in position on the machine.

Install the battery

To install the battery:

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Insert the battery in the compartment.
3. Press on the battery until the battery lock/release lever hooks into the groove.

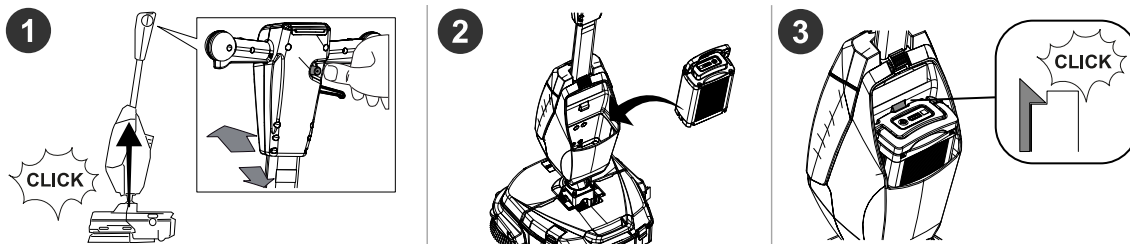

Remove objects on the surface to be cleaned

NOTICE Vacuuming objects. Damage to the machine or clogs. Remove all objects on the surface to be cleaned.

10 Machine settings


Water menu

Under specific operating conditions, or to reduce water and detergent consumption, the amount of cleaning solution can be set. In this case, the amount of cleaning solution cannot be modified by the operator.

Note: To adjust the operating parameters, all functions must be turned off.

Note: With the factory setting, the amount of cleaning solution can be set and changed at any time.

Water menu LED legend.

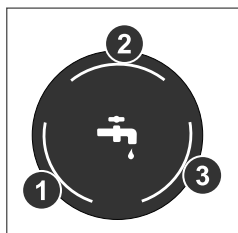

Meaning of the LED on the cleaning solution button:

- LED 1 fixed: MINIMUM cleaning solution level.
- LED 1+2 fixed: MEDIUM cleaning solution level.
- LED 1+2+3 fixed: MAXIMUM cleaning solution level.

To access the water menu:

1. Press and at the same time: all LEDs on the operation panel flash and the Water menu is live.

Procedure point	Press:	Then:		To confirm, press:	Or go to:
		Fixed LEDs	Flashing LEDs		
1			+	= Minimum level set	in point 2
2			+	= Middle level set	in point 3
3				= Maximum level set	in point 4
4			+	= Middle level set	in point 5


Procedure point	Press:	Then:		To confirm, press:	Or go to:
		Fixed LEDs	Flashing LEDs		
5				 = Minimum level set	in point 6
6		-		 = No level set	in point 1

2. At the end of the procedure, press : to access the LED menu.

LED menu.

Under specific operating conditions, or if required by the company and national safety regulations, it is necessary to set the number of LEDs switched on during cleaning.

Note: To adjust the number of LEDs switched on, all functions must be turned off.

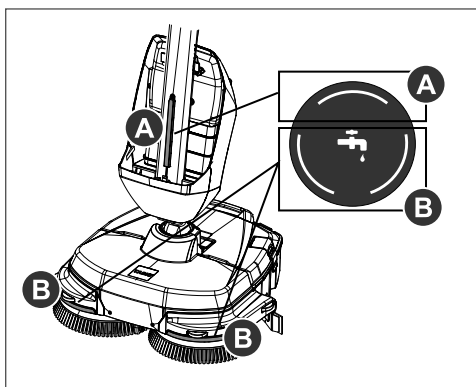

The machine has the following:

- A. One LED behind the cleaning solution tank. On the operation panel, the upper LED corresponds to the control button for the cleaning solution.
- B. Two work LED lights above the brushes. On the operation panel, the two lower LEDs correspond to the control button for the cleaning solution.

1. Press  and  simultaneously.
2. Press : all LEDs on the operation panel and on the machine flash and the Water menu is live.

Procedure point	Press:	Then: Flashing LEDs	To confirm, press:	Or go to:
1		A	 = LED light behind the tank on	in point 2
2		B	 = LED work light on	in point 3
3		-	 = All LEDs are switched off	in point 4
4		B	 = LED work light on	in point 5
5		B	 = LED light behind the tank on	in point 6
6		A+B	 = All LEDs are switched on	in point 1

2. At the end of the procedure, press : to return to the work mode.

11 Use the machine

Warnings

⚠ WARNING Failure to comply with the safety instructions. Personal injury. Before using the machine, read the safety chapter carefully to become familiar with the machine functions.

⚠ WARNING Inadequate protective equipment. Personal injury. Put on all the personal protective equipment determined by your employer in the risk analysis when using the machine. Always refer to the regulations on personal protective equipment and dedicated regulations for the workplace.

Cleaning method


Cleaning can be:

- A. direct: cleaning solution application, brushing, and vacuuming in a single pass;
- B. indirect: cleaning solution application in a first pass, and brushing and vacuuming in a second pass.


Beginning work

To start working with the machine:

1. Switch on the battery.

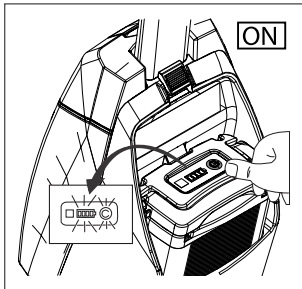

2. Lower the dirty water tank.

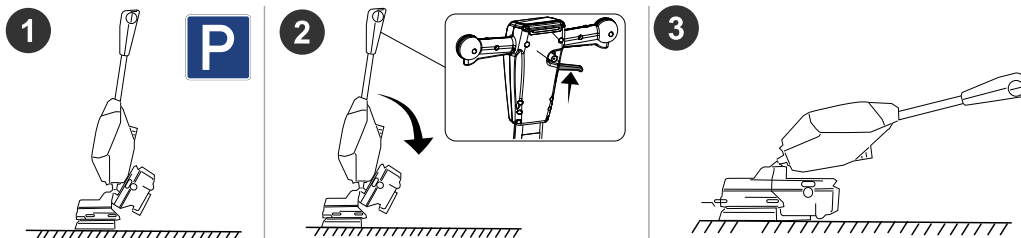

3. Press  to activate the vacuum.
4. Press  to activate dispensing of the cleaning solution.

Note: The cleaning solution is started only when the brushes rotate.

5. Press  or  to increase or decrease the amount of cleaning solution distributed on the surface to be cleaned.

Note: Diversey promotes a sustainable way to work by recommending the correct amount of cleaning products. Incorrect, excessive or insufficient dosing leads to unsatisfactory cleaning results.

To work with the Twister function:

1. Press  to activate the Twister function.

Note: With the twister function active, the rotation speed of the brushes and the vacuum power is greater for deeper, faster cleaning.

To operate with the ECO function:

1. Press  to activate the ECO function.

Note: With the ECO function active, the brush rotation speed and vacuum power are lower. This guarantees a longer battery charge life.


Interventions during work

Fill the clean water tank.

⚠ NOTICE Dry cleaning. Surface / floor damage. Always use a cleaning solution or water to clean the floor.

See: Fill the clean water tank

Drain the dirty water tank

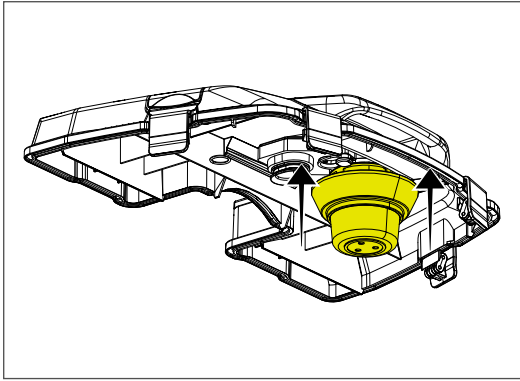

When the dirty water tank is full, the float is sucked to the suction filter. This is signaled by a different sound of the machine due to increased suction speed and the presence of water on the floor that is no longer being sucked up.

See: Empty and clean the dirty water tank

Pause

The machine can be paused in the parking position for short periods.

With the machine operating and then in parking position:

1. the emission of the cleaning solution stops automatically
2. the vacuum operates at maximum speed for a few seconds (the indicator light on the panel flashes) and then switches off.

Note: The next time the machine is started, the cleaning solution distribution level set in the memory is kept.

Note: The next time work is restarted, the cleaning solution and vacuum are activated immediately.

End of work


⚠ CAUTION Unauthorized use of the machine. Accidents. Remove the battery before leaving the machine.

To finish the job:

1. Press  to stop the introduction of the cleaning solution
2. Move forward with the machine a few more meters so that the accessories continue to rotate for a while and "dripping" is avoided.
3. Press  to deactivate the vacuum.
4. Release the drive lever and brush rotation.
5. Put the handle in vertical position: the machine is in pause.

When work is complete:

1. Turn off the battery.

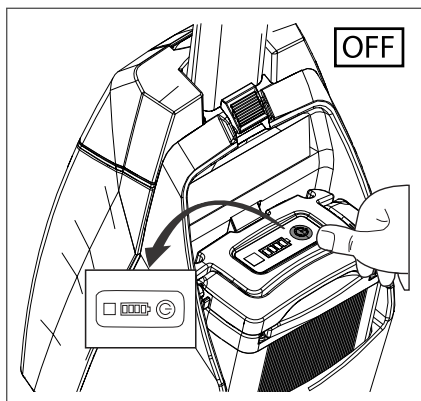

2. Remove the battery. See Remove the battery.
3. Put the machine in the parking or transport position. See Transportation, parking, and disposal
4. Clean the machine, the clean water tank, and the dirty water tank. See Clean the machine, Empty and clean the dirty water tank

Other functions

Battery power off if not in use function

If it is not in use, the battery will turn off after 1 hour. During this period, follow the following safety instructions

SAFETY INSTRUCTIONS Unexpected machine movements. Accidents.

- the operator must move with the sole purpose of clearing the work area while remaining in the machine's field of view.
- no operations should be performed on the parts of the machine that can potentially move.
- only clean sucked or jammed objects from the suction nozzle.

Battery life monitoring function

The battery charge level indicator provides information on the remaining time of battery charge availability and thus the time available for work.

Vacuum power off function

If the machine is parked with the vacuum still activated, it stops after a few seconds.

12 Machine maintenance

Always perform maintenance operations at the prescribed intervals to keep the machine in good working condition. Failure to maintain the machine reduces its working life and causes interruptions in operation for repairs and increases the risk of accidents.

Warnings

⚠ WARNING Maintenance performed by untrained technicians. Personal injury. Have the machine maintained only by suitably trained technical personnel.

⚠ WARNING Failure to comply with the safety instructions. Personal injury. Before performing the machine maintenance, read the safety chapter carefully.

⚠ WARNING Inadequate protective equipment. Personal injury. When performing machine maintenance, put on all the personal protective equipment determined by your employer in the risk analysis. Always refer to the regulations on personal protective equipment and dedicated regulations for the workplace.

⚠ WARNING Use of non-original spare parts. Compromised machine safety. Use only the replacement parts indicated in the operating instructions or recommended by Diversey personnel. Non-original replacement parts installed in the machine will drop all warranty claims. Diversey accepts no liability for harm resulting from using non-original spare parts.

Maintenance intervals

The following are the maintenance activities to be carried out **each day at the end of work**.

Note: *Shorter intervals are required in case of extraordinary stresses and/or insufficient maintenance.*

Note: *All components subject to maintenance are yellow or indicated with a yellow sticker.*

Activities
Clean the machine and accessories with a damp cloth
Empty and clean the dirty water tank
Check and clean the dirty water tank suction filter
Check the suction nozzle blades, clean them, and replace them if necessary
Check the brushes, clean them, and replace them if necessary

Customer Service


Contact the nearest Diversey authorized service center if there is a malfunction or for any other information. When calling, always communicate the model and serial number printed on the nameplate. The addresses of Diversey service centers are listed on the last page of this manual.

Clean the machine

NOTICE Incorrect cleaning. Clean the machine with a damp cloth, avoid high-pressure water jets and cleaning with running water due to the presence of electric circuits that could be damaged.

Empty and clean the dirty water tank


1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Press one of the two yellow quick release levers and pull out the dirty water tank using the handle.
3. Lift up the hooks and remove the dirty water tank cover.
4. Empty the dirty water tank and clean it with water.

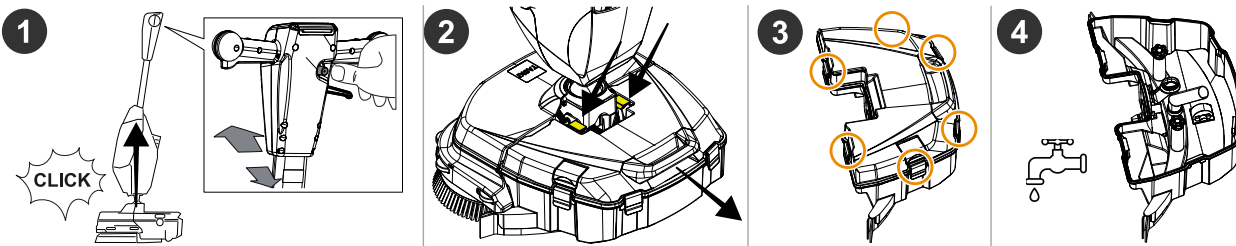

At the end of the procedure, close the cover of the dirty water tank and insert it into the machine.

Check and clean the dirty water tank suction filter

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Press one of the two yellow quick release levers and pull out the dirty water tank using the handle.
3. Lift up the hooks and remove the dirty water tank cover.
4. Turn and pull the suction filter. Wash with water.
5. Remove the float. Wash with water.

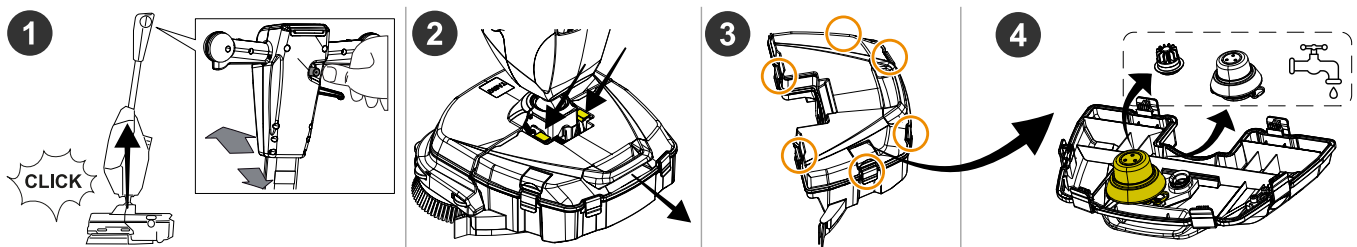


At the end of the procedure:

1. Reinstall the float.

NOTICE Damage to the turbine. Always reinstall the float. If the machine is used without the float, the automatic block on the suction line does not operate correctly when the dirty water tank fills up. This leads to water leaking into the turbine and rapidly to damage.

2. Reposition the suction filter.
3. Close the dirty water tank and hook it on the machine.

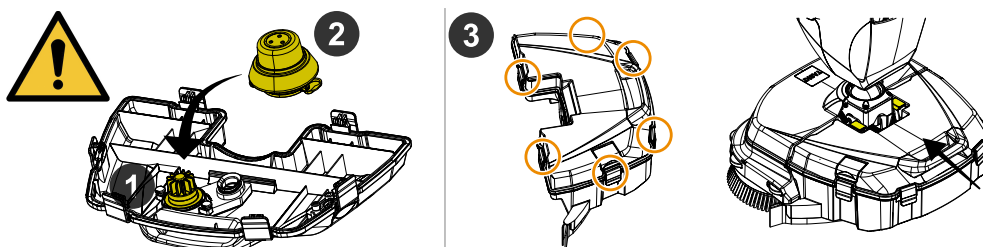


Check and replace the suction nozzle blades.

NOTICE Instability of the machine. Before installing the suction nozzle blades, remove the clean water tank. This stabilizes the machine when it is tilted backward.

Note: If the suction nozzle blades are intact, proceed to clean with water.


Before installing the suction nozzle blades:

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Press one of the two yellow quick release levers and pull out the dirty water tank using the handle.
3. Open the plug and check that the dirty water tank is empty; empty if necessary.

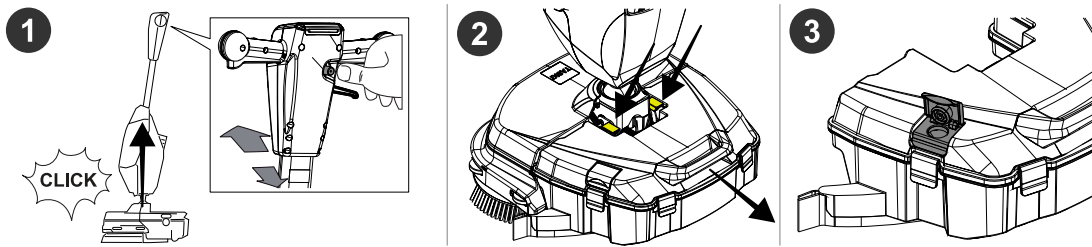

To install the suction nozzle blades:

1. Lift up the hooks and remove the dirty water tank cover.
2. Unscrew the yellow screws and remove the suction nozzle blades holder.
3. Check the blades for wear and replace them as needed.

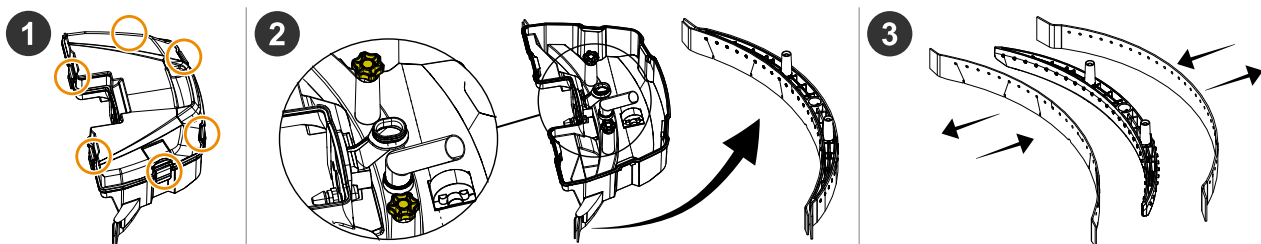

4. Insert the holder with the blades in the holes below the dirty water tank.
5. Tighten the yellow screws.

At the end of the procedure, close the cover of the dirty water tank and insert it into the machine.

Check and replace the brushes


CAUTION Worn brushes. Damage to machine and surfaces. Replace worn brushes. Use only original spare parts.

NOTICE Instability of the machine. Before installing the brushes, remove the clean water tank. This stabilizes the machine when it is tilted backward.

Note: If the brushes are intact, proceed to clean with water (maximum temperature 40 °C).

To install the brushes:

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. From the parking position, tilt the machine onto its rear side.
3. Insert the brush into the hexagonal connections: the brushes stay in place with magnets.

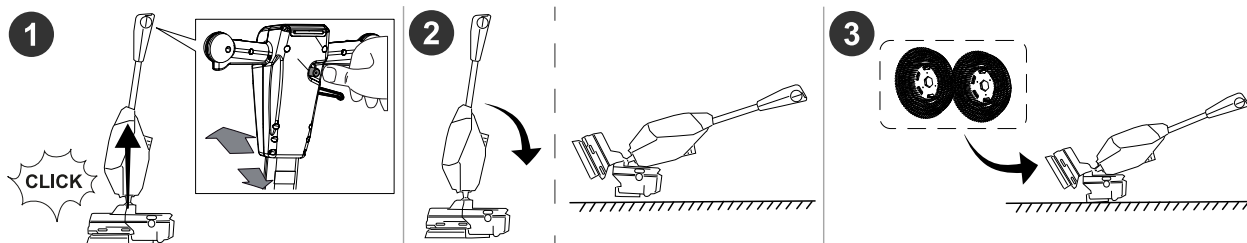

13 Troubleshooting

Listed below are the most common problems, the possible cause, and how to resolve them. If the suggested solution does not solve the problem, contact an authorized Diversey service center.

Problem	Possible cause	What to do	Reference in the manual
The machine does not work.	Machine is switched off.	Switch on the battery and wait a few seconds.	a pagina13
	Battery empty.	Recharge the battery.	Please see the battery charger operating instructions.
	Defective battery.	Contact an authorized Diversey. service center.	
	Defective battery charger.	Contact an authorized Diversey. service center.	
Low vacuum pressure (orange indicator light on the operation panel is on).	Failure of the motor, brushes, electrical installation or other machine components.	Switch off the machine and wait 30 minutes. Turn on the machine. If the indicator light stays on, contact an authorized Diversey service center.	
	Dirty water tank full.	Empty the dirty water tank.	a pagina16
	Dirty water tank suction filter clogged.	Clean the suction filter.	a pagina16

14 Technical Data

Machine	ULTIMAXX 360	Unit
Rated voltage	36 V	DC
Rated power	250	W
Dimensions (L x W x H)	45 x 51 x 119	cm
Width of the suction nozzle	53	cm
Machine weight (without brushes and without battery)	16.1	kg
Machine weight with brushes (without battery)	17.4	kg
Machine weight with brushes and battery	21	kg
Ready-to-use machine weight	25	kg
Cleaning solution tank capacity (+/- 5%)	4	l

Values determined as per IEC 60335-2-72

Machine	ULTIMAXX 360	Unit
Sound pressure level, LpA	< 70	dB(A)
Uncertainty KpA	2.5	dB(A)
Vibrations	< 2.5	m/s ²
Uncertainty K	0.25	m/s ²
Degree of protection	IPX3	
Protection class	III	

15 Accessories and options

⚠ WARNING Use of unauthorized accessories. Machine safety compromised. Use only those accessories indicated in the operating instructions or recommended by Diversey personnel.

Code	Description of accessory
9307247	ULTIMAXX 360 Standard water saver scrubbing brush - 2 pcs
9307248	ULTIMAXX 360 Heavy-duty scrubbing brush - 2 pcs
9307249	ULTIMAXX 360 Guide discs - 2 pcs

Optional

Code	Optional description
7525338	TASKI IntelliPower Lithium-ion battery 36 V 15 Ah
7525339	TASKI IntelliPower Lithium-ion battery charger 36 V EU (supplied with cable and socket-outlet)
7525360	TASKI IntelliPower Lithium-ion battery charger 36 V UNI (supplied with cable and socket-outlet)

16 Transportation, parking, and disposal

⚠ CAUTION Unauthorized use of the machine. Accidents. Turn off and remove the battery before leaving the machine. Never leave the machine unattended.

⚠ CAUTION High machine weight. Injury to the muscular-skeletal system. The machine must always be transported by two people according to current national regulations.

⚠ CAUTION Incorrect movement of the battery. Harm to persons and the battery. Follow the instructions and requirements provided in the battery safety data sheet.

NOTICE Machine tipping. Make sure that the machine is properly secured in the transport vehicle.


NOTICE Machine damage. Transport the machine in an upright position.

Transport

Before transporting the machine:

1. Put the machine in a vertical position. See [Parking](#)
2. Deactivate the battery. See: [End of work](#)
3. Remove the battery. See: [Emergency](#)
4. Remove the clean water tank. See: [Before using the machine](#)
5. Remove the dirty water tank. See: [Before using the machine](#)
6. Remove the brushes or abrasive pads. See: [Install the brushes](#)

To lift the machine, use the lifting points indicated below.

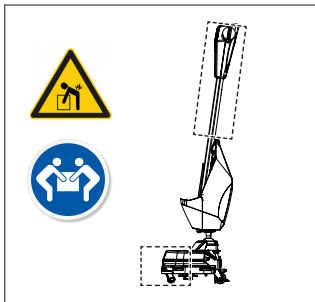

Parking


Before parking the machine:

1. Deactivate the battery. See: [End of work](#)
2. Remove the battery. See: [Emergency](#)

To park the machine:

1. Press the handle lock button, move the handle slightly forward and back, until it clicks. The handle is locked in the vertical position.
2. Pull back on the handle until the brush assembly is raised and the transport wheels and the support wheel snap into place.
3. Set the machine on the transport wheels.

Note: In this position, the brushes are off the floor.

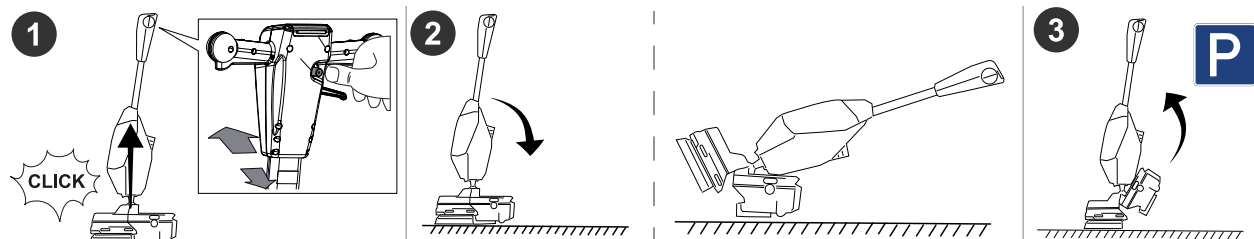

Disposal

Dispose of the machine and accessories according to national regulations.

Note: Contact an authorized Diversey service center for more information

Batteries

 **WARNING** Incorrect disposal. Pollution of the environment. Before finally decommissioning the machine, remove the battery.

Dispose of used or defective batteries properly as per Directive 2006/66/EC or applicable national regulations.

AT

Diversey Austria Trading GmbH
Concorde Business Park 1/ D2/9
2320 Schwechat
Tel (43) 1 605 57 0

BE

Diversey Belgium BVBA
Haachtsesteenweg 672
1910 Kampenhout
Tel (32) 16 61 77 77

CH

Diversey Europe B.V., Utrecht
Zweigniederlassung Münchwilen
Eschlikonerstrasse
9542 Münchwilen
Tel (41) 71 969 27 27

CZ

Diversey Ceska republika, s.r.o
K Hájum 1233/2
155 00 Praha 5
Tel (420) 296 357 460

DE

Diversey Deutschland GmbH & Co. OHG
Mallaustrasse 50-56
68219 Mannheim
Tel (49) 0800 82 75 473

DK

Diversey Danmark ApS
Frydenlundsvej 30
2950 Vedbaek
Tel +45 70 10 66 11

ES

Diversey España S.L.
Avenida Conde Duque, Nave 5
28343 Valdemoro, Madrid
Tel (34) 902 01 11 06

FI

DiverseySuomi Oy
Lemminkäisenkatu 46
20520 Turku
Tel +358 20 747 42 30

FR

Diversey (France) S.A.S.
201 rue Carnot
94120 Fontenay-Sous-Bois
Tel +33 1 45 14 76 76

GB

Diversey Limited
Weston Favell Centre
NN3 8PD Northampton
Tel +44 800 52 55 25

GR

Diversey Hellas S.A.
1a Pierias St. & Mesologgiou
14451 Metamorfossi, Attica
Tel +30 21 0638 5900

HU

Diversey Kft.
Puskás Tivadar út 6
2040 Budaors
Tel +36 23 509 100

IT

Diversey S.P.A.
Strada Statale 235 Lodi-Crema,
26010 Bagnolo Cremasco (CR)
Tel +39 039 959 11 50

NL

Diversey Operations Europe B.V.
De Corridor 4
3621ZB Breukelen
Tel +31 (0) 30 247 68 85

NO

Solenis Norway AS
Postboks 2051 -
Vika 0125, Oslo
Tel +47 94 02 21 83

PL

Diversey Polska Sp. Z o.o.
Aleje Jerozolimskie 134
02-211 Warszawa
Tel +48 22 328 10 12

PT

Diversey Portugal-Sistemas de Higiene e Limpeza Unipessoal Lda
Rua Victor Câmara Edifício Q61 D.
Amélia, 1º andar, Lado B Quinta da Fonte
2770-229 Paço de Arcos
Tel (351) 2 191 57 000

RO

Diversey Romania S.R.L.
Strada Banul Antonache 40 - 44
etajul 5,
Sector 1, Bucuresti, 011665
Tel 0800 8000 81

RU

LLC Diversey
Premises III, Floor 2
24 D, Smol'naya Str. - 125445
Moscow
Tel +7 (495) 970-1797

SE

Diversey Sverige AB
Liljeholmsvägen 18
117 61 Stockholm
Tel +46 (0)8 77 99 300

SK

Diversey Slovensko s.r.o
Rybničná 40
831 06 Bratislava
Tel +421 2 4445 4895

SL

Diversey d.o.o.
Trzaska cesta 37a
2000 Maribor
Tel +386 2 320 7000

TR

Diversey Türkiye
Bar. Mah. Ihlamur Bulvarı No:3/67
Ağaoğlu My NewWork K:7
Ataşehir/İstanbul - Türkiye
Tel +90 216 578 64 00

US

Diversey
415 Cascade Pointe Boulevard
Charlotte, NC
USA, 28277
Tel +1 980-221-3235

CA

Diversey
3755 Laird Road Mississauga,
Ontario
CANADA L5L 0B3
Tel 1-800-827-5487

TASKI®

Diversey Europe Operations B.V.
De Corridor 4
3621ZB Breukelen
Netherlands

ULTIMAXX 360
Operating instructions / 12092-57 4025 | EN
© 2023 Diversey Europe Operations B.V.